

INSTALLATION GUIDE

BUSCOT PIETRA PAZZA

INSTALLATION INSTRUCTION

01.

Unload and Sort

Unload the crate(s) and arrange the pieces by size in a visible area. This will help you assess the available sizes and shapes before starting.

02.

Dry Lay the Floor

A successful Pietra Pazza floor relies on dry laying. Lay all pieces loosely before applying adhesive. Only proceed to fixing once the entire area has been dry laid.



03.

Start with the Largest Pieces

Place the largest tiles evenly across the area. Ensure they are spread out, avoiding clusters. These placements do not need to be precise.




CA' PIETRA

ARTISANS SINCE 1989

[CAPIETRA.COM](https://capietra.com)

BUSCOT PIETRA PAZZA

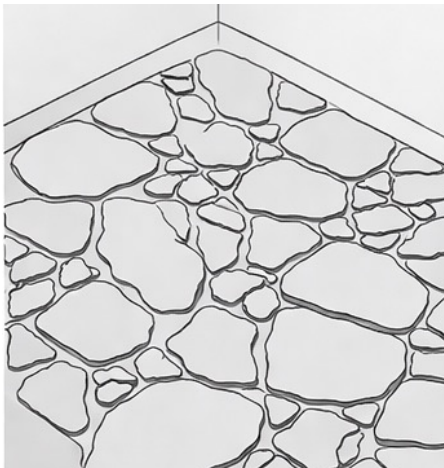

04.

Fill Gaps with Smaller Tiles

Fill the spaces between the large tiles using progressively smaller tiles. Adjust and move pieces as needed to achieve the tightest joints possible.



05.

Manage Joint Widths

Joint sizes will vary, but aim to keep them under 50mm. Use smaller pieces to fill larger gaps wherever possible.



06.

Modify Small Pieces if Needed

Smaller pieces can be cut from larger tiles to fit gaps. Be cautious, as cutting may create sharp edges. Round these edges using a grinder and sanding pad suitable for natural stone.

07.

Edge Placement

Start filling the floor close to walls and edges. Keep extra pieces aside for cutting. Do not cut tiles during dry laying, as floor placement may shift before adhesive is applied.

08.

Grouting

Grouting is where the floor really comes into its own.

Pietra Pazza requires more grout than standard floors. You may use our Resin-Cement grout for the best range of colour options, or a flowable grout such as UltraTile ProGrout for speed and economy. Mix the grout thick to prevent slumping. Some slumping or cracking may occur in wide joints; apply a second layer while the first is still damp for better adhesion if needed.

